QOTO SMART VALVE CONTROLLER USER SOP

Open the top cover

Slide the SIM cover open

Align the SIM card with the tray's cutout and insert it.
Push forward to lock up the

Close the Top cover

Download and login

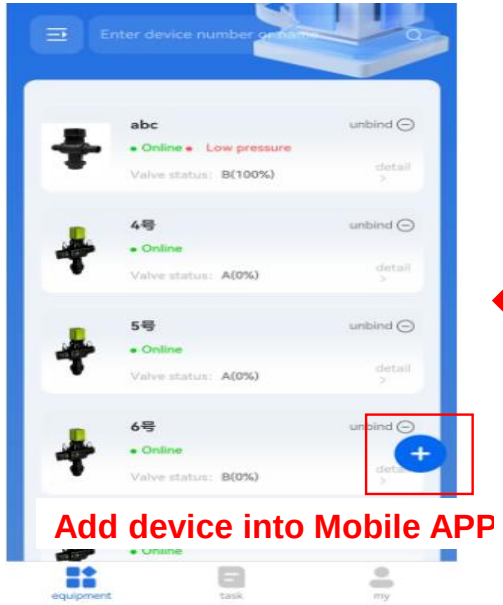

Add device into Mobile APP

QOTO SMART VALVE CONTROLLER USER SOP

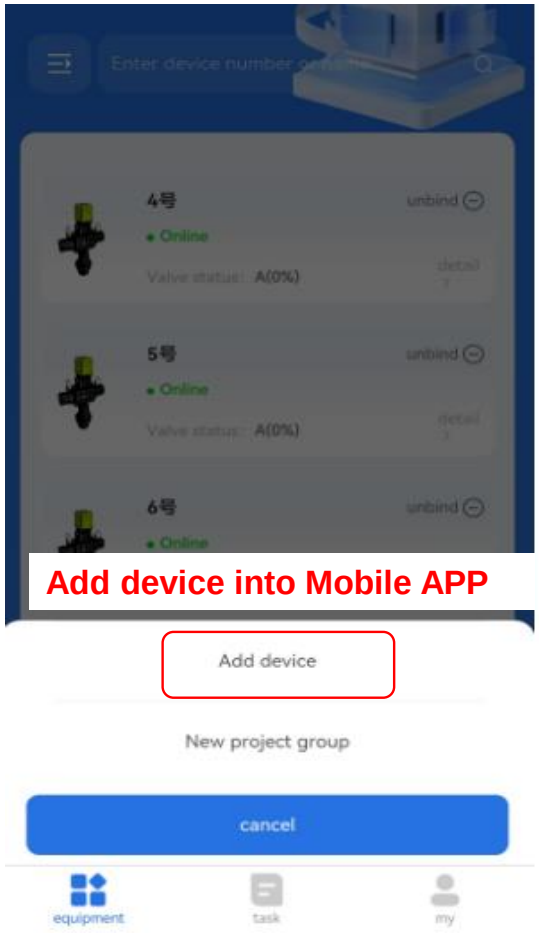

Add device into Mobile APP

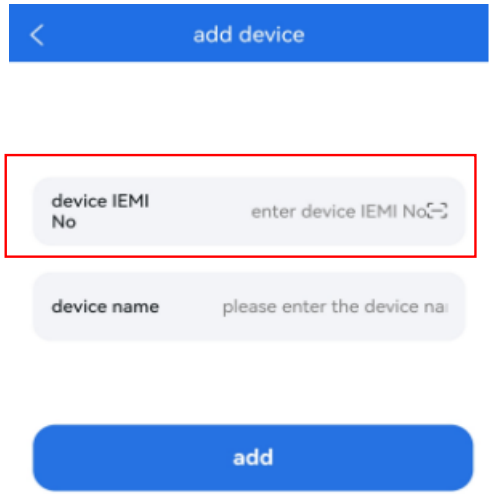

scan product QR code

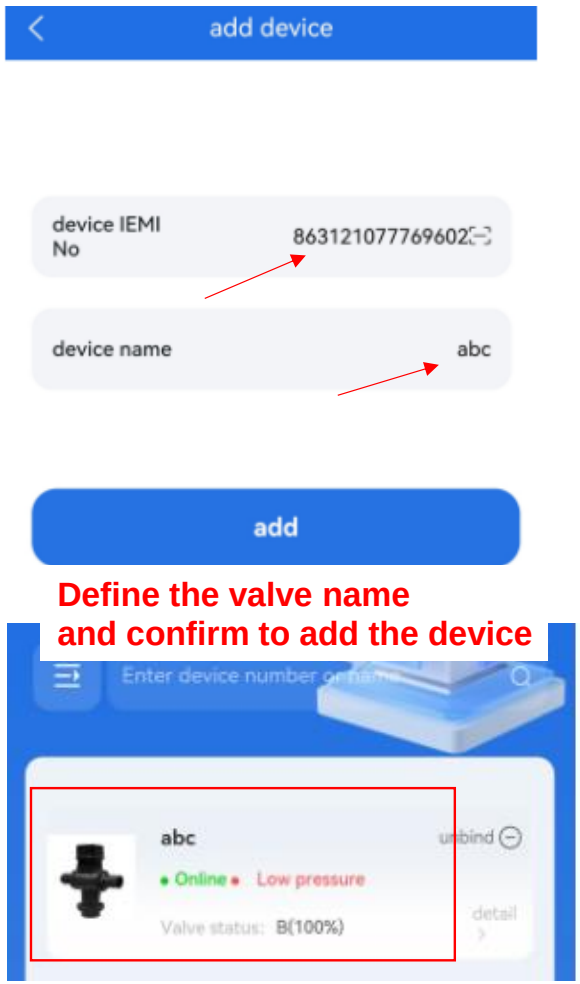

Define the valve name
and confirm to add the device

QOTO SMART VALVE CONTROLLER USER SOP

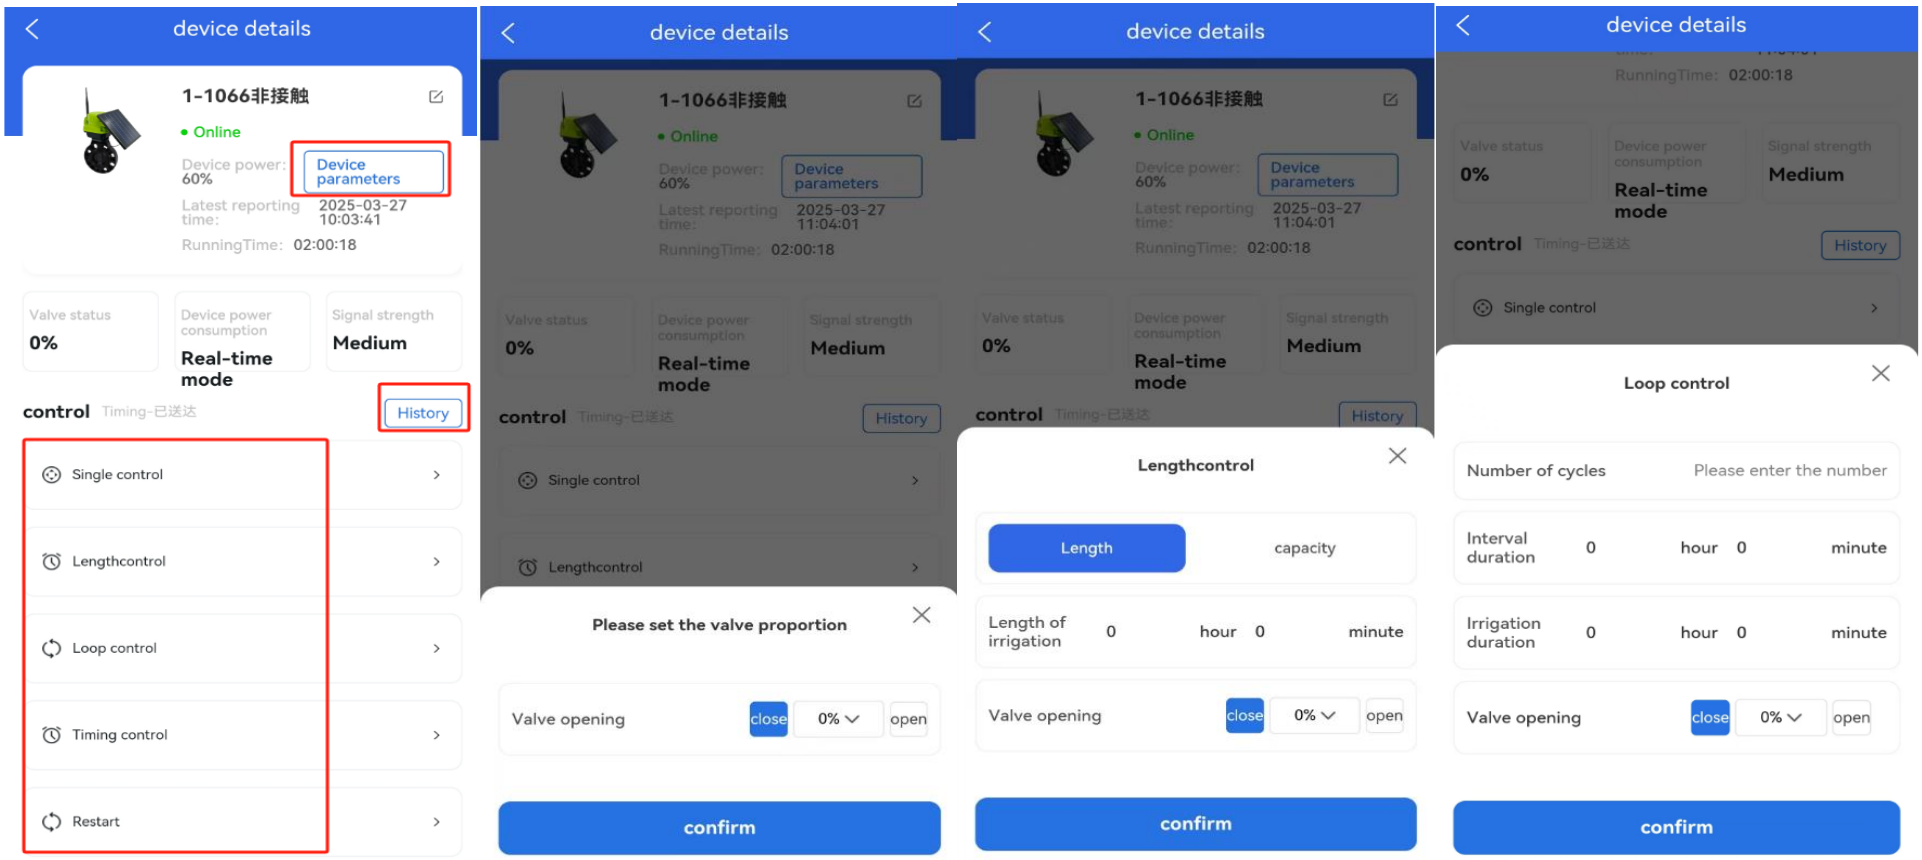

After adding the devices, click on “details” to view the device parameter.
Device parameter includes: parameter query,parameter configuration and review, device operation interface, history, control log, escalation log, statistic, etc
Device operation: to operate valve: Single control, Length control (duration/capacity control), Loop control (cycle control), timing control, restart.

Notice:
When the device departs from the factory, it is set to sleep mode by default.
The device cannot be operated in sleep mode and must be activated for use.
Activation method: get the magnetic stick close the valve's “OFF” button for 5 seconds
When the device emits beeps continuously, it is activated. As illustrated in the picture